


BELMONT / PRUDENTIAL Install Guide REV1

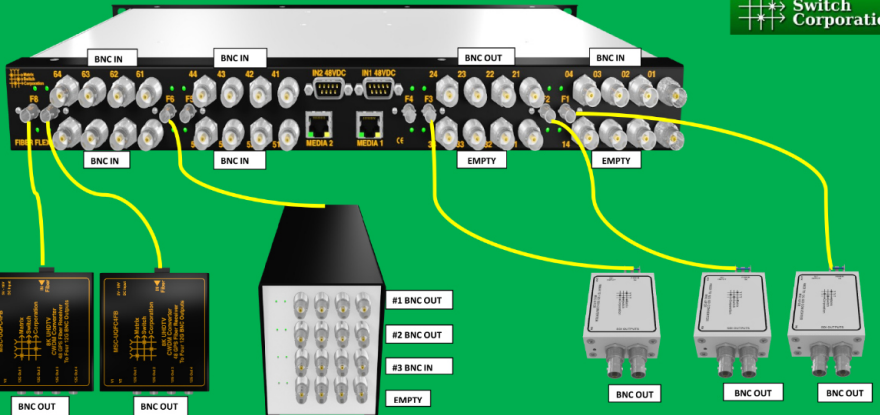

OUT 1	-----	IN 74
OUT 2	-----	IN 73
OUT 3	-----	IN 72
OUT 4	-----	IN 71

OUT 1	-----	IN 64
OUT 2	-----	IN 63
OUT 3	-----	IN 62
OUT 4	-----	IN 61

#1		
OUT 1	-----	IN 44
OUT 2	-----	IN 43
OUT 3	-----	IN 42
OUT 4	-----	IN 41

#2		
OUT 1	-----	IN 54
OUT 2	-----	IN 53
OUT 3	-----	IN 52
OUT 4	-----	IN 51

#3		
IN 1	-----	OUT 24
IN 2	-----	OUT 23
IN 3	-----	OUT 22
IN 4	-----	OUT 21

OUT	-----	IN 03
-----	-------	-------

OUT	-----	IN 02
-----	-------	-------

OUT	-----	IN 01
-----	-------	-------